

CHANGING A FUSE

Caution: do not forget to remove the two nuts represented by the two yellow arrows. (14mm spanner)

Disconnect first the two probe plugs after having well identified it for an easy rewinding (1/4 turn to the left then pull down

You need now to take out the two 14mm nuts. Do not forgot those at all.

Make pivot on the front with a little screwdriver.

Take the front out pulling it up then maintain it without disconnecting electrical layer. You can now see fuse covers.

POWER SUPPLY

Replace the damaged fuse by one those showing * then rewind it all. Do not forget to plug probes