


## PUMP OFF

Your pH pump / O.R.P is not active

|              |                                   |
|--------------|-----------------------------------|
| Press        | VALID                             |
| Then press   | 4 (services)                      |
| Then press   | 1 (relay test)                    |
| Then press   | 2 (pH-) or (O.R.P/REDOX)          |
| Finaly press | 1 (active) and 2 to stop the pump |

The pH pump (2) or bleach (3) will start to operate.

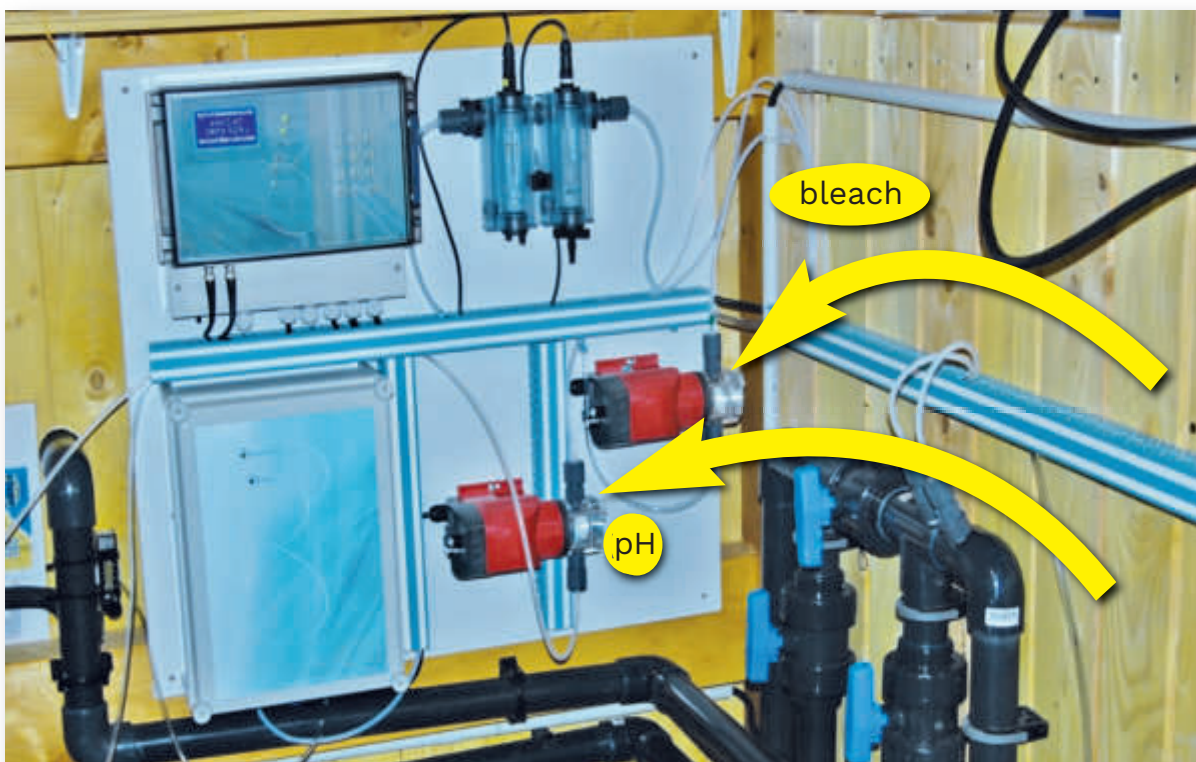

Unscrew by half a turn the top screw to release air.  
When the liquid arrives under the pump, screw it back.  
If the left pump (pH) is correctly primed, the indicated pH will go down and the ORP will increase.  
If the right pump (bleach) is correctly primed, the PH will increase and the ORP will go down at first.  
If the pump has a head, unscrew the valve at the right of the head and not on the tube.  
The device will shut itself to reboot automatically.